



Jumper 5 (JP5) is used to include or exclude a 22Ω resistor to adjust the power output

Jumper 1 (JP1) is used to set 30/60 second pulse INTERVAL.  
 Fitted = 1 pulse every 60 seconds  
 Not fitted = 1 pulse every 30 seconds

### Pulse LENGTH jumpers

There are 3 pulse length selections.

With no jumpers fitted the pulse length is approx 60mS

Jumper4 (JP4) fitted is approx 120mS

Jumper3 (JP3) fitted is approx 240mS

- Push Button 1 (Green) is used to set the '**Advance**' mode.
- Push Button 2 (Red) is used to set the '**Hold**' mode.

Set these before switching on the power at the battery box.